

# OUTDOOR ORTE SMOKER WITH SMOKE GENERATOR



The ORTE SMOKER is a device designed for smoking meat, cheese, fish and cold cuts. It is equipped with an electric heater, a smoke generator (a container for wood chips with a pump) and a fan. In it, You can dry products, smoke them and give them a great taste and aroma thanks to smoking wood chips.

After setting the required operating mode using the buttons on the control panel, you set the chips on fire, and while they smolder, the heater reaches the set temperature.

The heater turns on depending on the needs and maintains the desired temperature. The drip shelf protects the heater from smoked meat drippings.

TYPE	SO1	SO2	SO3
MANUFACTURER	Orte Polska sp.z o.o.	Orte Polska sp.z o.o.	Orte Polska sp.z o.o.
BRAND	Orte	Orte	Orte
MODEL/SYMBOL	SO1	SO2	SO2
Country of manufacture	Poland	Poland	Poland
Warranty	12/24 months	12/24 months	12/24 months
CONDITION			
Condition	new	new	new
SPECIFICATION			
Type of fuel	smoking wood chips	smoking wood chips	smoking wood chips
Number of levels of guides	5	7	9
Number of heaters	1	2	3
Power consumption/rated load	550 W	1100 W	1650 W
Heater power	500 W	1000 W	1500 W
Rated voltage	230 V	230 V	230 V
Fuse	5A	5 A	5 A
Maximum temperature °C	120 °C	120 °C	120 °C
Smoking cabinet capacity	179 l	473 l	1050 l
Chip container capacity	5 l	5 l	5 l
Charge weight	12-18 kg	19-40 kg	40-70 kg
Fuel consumption	1-2 l/h	1-2 l/h	1-2 l/h
Mobility - equipped with wheels	NO	NO	YES
Manual ignition	YES	YES	YES
Product width	74.1 cm	91 cm	103,1 cm
Product height	111 cm	152 cm	195,6 cm
Product depth	47.2 cm	63,2 cm	85,1 cm
Product weight	35 kg	65 kg	115 kg



# OUTDOOR ORTE SMOKER WITH SMOKE GENERATOR

## Assembly required.

Product description:

- smoker with smoke generator to be used in outdoor conditions,
- made of stainless steel.

**IMPORTANT. KEEP FOR FUTURE REFERENCE: READ CAREFULLY** Keeping smokers clean and in appropriate storage will allow you to keep their appearance in good condition for a long time as well as increase the safety factor. The best way to extend the life of smoker is regular cleaning and proper storage.

**Casing cleaning:** Wipe surface with damp cloth / mild soap solution. Stains can be removed with a degreasing dishwashing liquid and sponge. This should only be done when the smoker is cold and unplugged.

**Smoke generator cleaning:** After each use remove the ashes. Perform this activity only when the smoker is cold and extinguished. When the smoker is extinguished and cold the ashes should be removed from inside.

**Fuel loading:** the smoke chips are loaded into the smoke generator. Safety precautions: Mind the hot surfaces – high risk of burning. Using of protection gloves is recommended. **Maintenance:** The internal components of the smoker are made of metal and are subject to natural processes. The surface of the smoker is subject to discolorations caused by high temperature and fat. It is a natural phenomenon.

**Storage:** If possible, keep the smoker in a cool and dry room. If kept outdoor please cover with a waterproof cover. In order to avoid moisture accumulation ensure air circulation.

## WARNING: BURN HAZZARD / FIRE HAZZARD,

All activities related to the operation, maintenance, cleaning and loading must be performed with the smoker extinguished and cold. Use protective gloves. Always adhere to local fire and electricity regulations. Never leave the smoker unattended. During operation the product heats up - possibility of burning when touching the surface.

## WARNING: HIGH RISK OF INJURY / RISK OF LIFE AND DAMAGE TO PROPERTY,

The smoker can be operated only by adults, after reading of the operating instructions. The smoker must be assembled and set up in accordance with all safety regulations. The product has edges made of metal be careful during operation. The product is composed of small elements – nuts, bolts etc. risk of swallowing by children. Children must be under guidance of adults. The product is heavy – be careful when moving (move the product with help of another person), risk of injury. Do not use the smoker indoor – risk to live and fire hazard. Do not use the smoker during rain or unfavorable weather conditions, ie. high wind, hazard of tipping over of the smoker, this may cause burning or fire hazard, risk of injury by sharp edges of the product. Be careful when removing and cleaning/ risk of injury.

Product suitable for burning smoke chips. Do not use any other fuel. Do not burn trash.

In an event of any problems or troubleshooting contact the distributor / sales company.

Depending on local regulations, the product after use may be subject to recycling or energy recovery.

Product instruction available on [www.orte.pl](http://www.orte.pl)

Made in Poland.

